


Blusafe Origin Smart

Installation

v2024.1

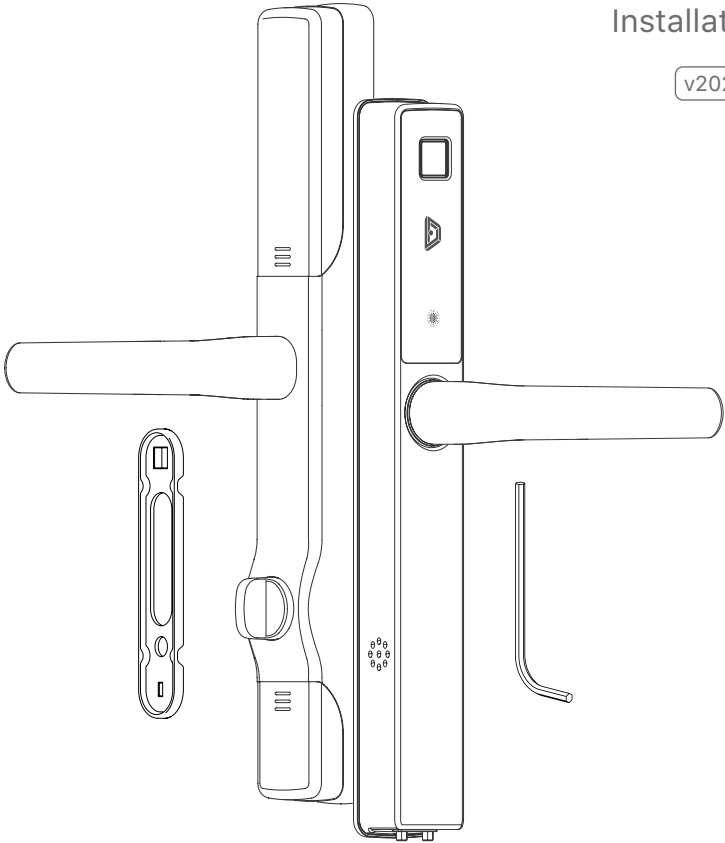


Do you know we offer
professional installation
service?


Please scan the QR to find
your local installer




Origin Smart Handle

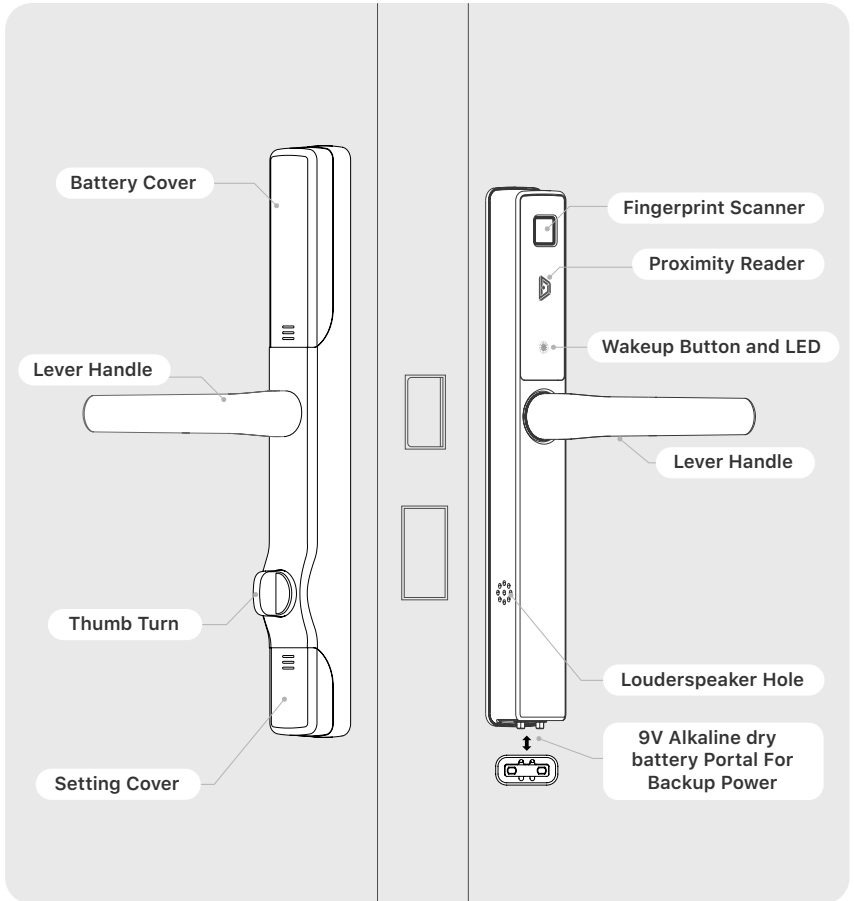


Box Contents

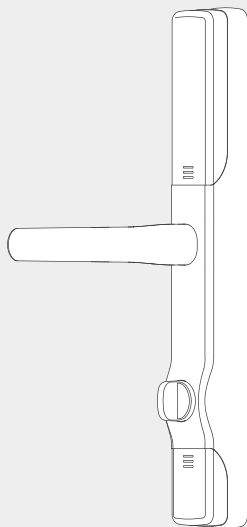


Internal Handle



Mounting Plate

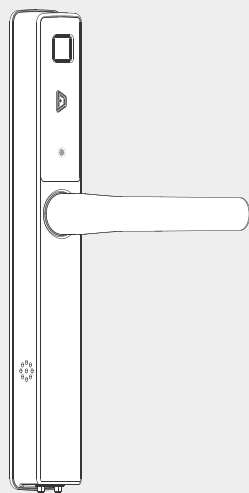

External Handle

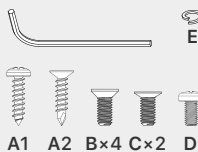

A1

A2

Bx4

Cx2

D

E



F

G

H



J


K

L

L




x 3



M




x 3



N



x 3



O



Key Card



Setting Tool



Fitting Jig



Setting Ruler

Remove the Existing Handle & Cylinder

Warning!



- Ensure the door is unlocked before removing the handles. Do not close the door until installation is complete.

Put something in the bottom of the door to prevent the door closing and locking itself!

Remove the existing handles and spindle. If a turn button cylinder is fitted, remove the internal handle with the cylinder.



Remove the existing screws, there may be 2 or 3

Remove the internal handle;



Remove the external handle and spindle to remove the locking cylinder;

Remove the fixing screw and turn the key/turn knob whilst putting gentle pressure on the opposite cylinder end, until the cylinder starts to withdraw. Pull the cylinder out, if there is no movement, try turning the key gently, both ways, left and right.

Remove the Existing Handle

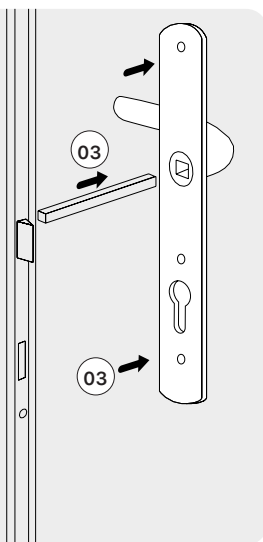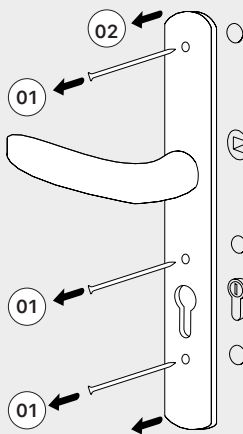

Remove the Cylinder

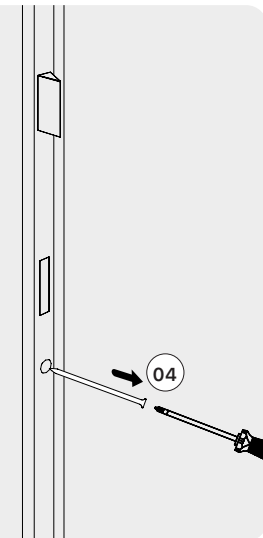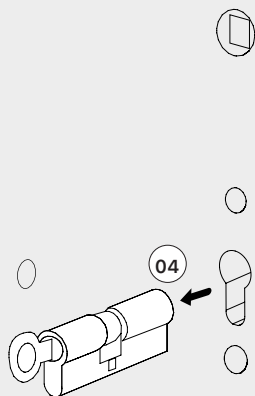

Tip







- It may be necessary to use a little force to fully remove the cylinder if it is catching on the sides of the prep hole.
- Some cylinders will only withdraw to the outside, some only to the inside, try both ways.
- If a security clamp is fitted, it will be necessary to remove this first, an Allen key will be needed to do this. Please see the FAQ section on the Blusafe website for help if you are unsure.

Install Operating Cam


Fix - Reset the cam



If the cam is accidentally turned, re-set it to vertical by pushing down the brass pin and turning the cam so the pin is in the central position.

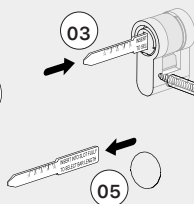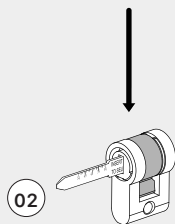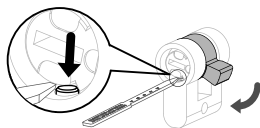

05

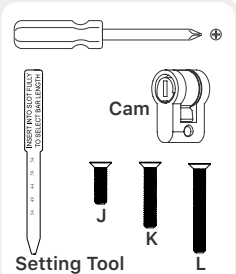



Insert the setting tool into the operating cam.
Push the operating cam into the lock (the hole in which you removed the key/cylinder).
Fix it in place with the fixing screw shown in the diagram.
Insert the fixing screw but do not overtighten.
Remove the setting tool.

Important!



Once cylinder installed in the door, turn the setting tool left and right, do not past angle shown on diagram. Does it move freely?
Yes, if it moves freely, please proceed.
No, remove the cylinder from door and realign until it moves freely.

Determine Handle Direction

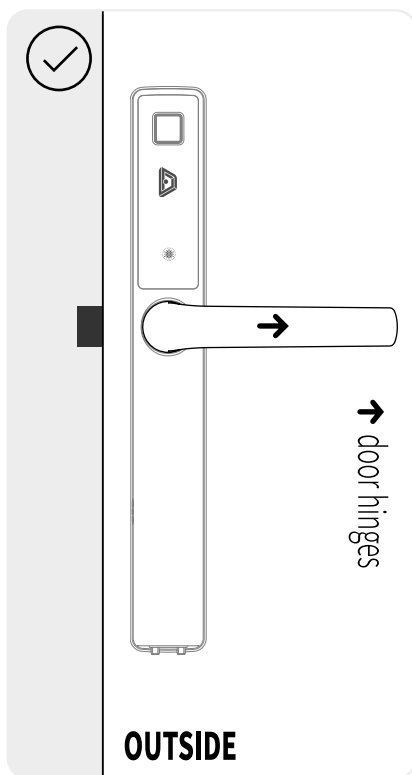
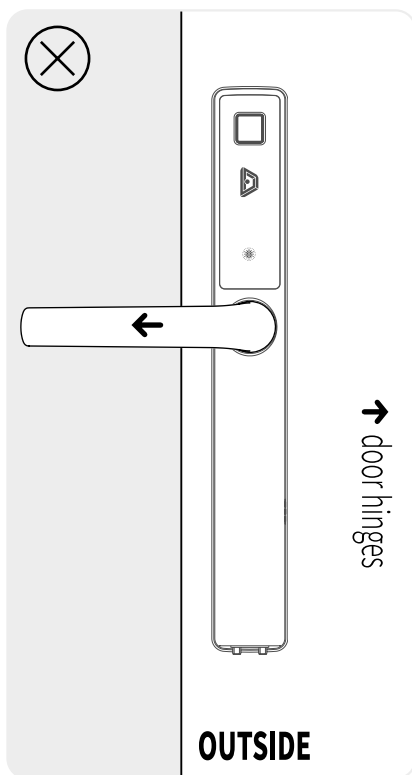


Depending on which way your door opens, determine which way the handles need to face. The handles should always point towards the door hinges. Check the Origin/Origin Smart handles against the current handles. If the handles need to face the other way, please see next page.

Change Internal Handle Direction


If the internal handle direction is not correct, follow the below steps to adjust.

Insert your screwdriver into the inside of the handle as shown below. Push it all the way to the end to locate the screw.




Tip


- For external handle, simply rotate the handle to the required position before inserting spindle.

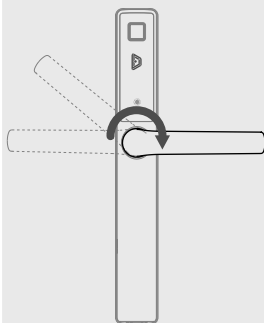

Unscrew the handle screw. Remove it and the spring washer and discard

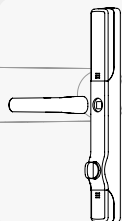


Remove the handle and rotate 180 degrees. Use the new handle screw and spring washer (D/E) to fasten the handle



Fitting the Screw Pillars

Method 1

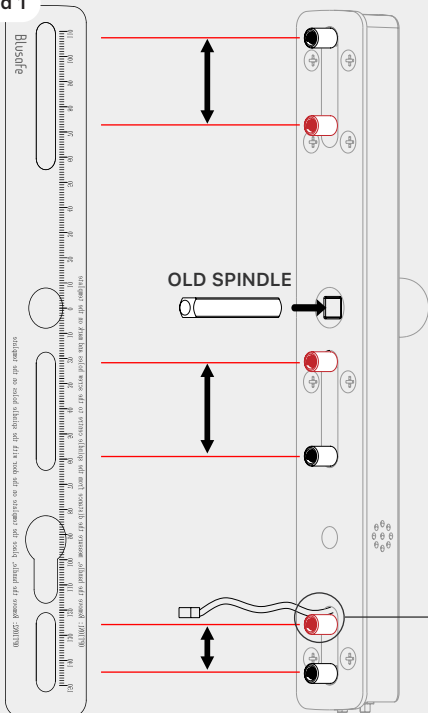

Setting Ruler



Setting Tool



3 screw pillars are supplied, but generally only 2 will be required.

They can be added or removed where necessary. The pillars can slide up or down when loosely tightened to match the current holes.

Fitting the Screw Pillars Method 1

Measure the screw holes of the existing handle. Insert the old spindle and use the setting ruler supplied and fit the screw pillars in the correct positions.

Important!



- Ensure the bottom pillar is below the electrical contact wire.

Alternative



Method 2

Use the old internal handle and spindle, join together with the Origin/Origin Smart outer handle.

Fix the screw pillars loosely - in line with the old handle screw ports.

Using the old handle screws, pass them through the old handle into the screw pillars and turn to locate, then gently tighten the pillars with fingers.

Remove the screws, old handle and spindle and fully tighten the pillars with the setting tool.

Important!





- Ensure you fully tighten the screw pillars with the setting tool or flat head screwdriver.



Measure Your Door Thickness



Please measure the total thickness of your door. Select the spindle and fixing screw pack as shown below.



Door thickness

44-50mm  48mm×3
 M-130mm

58-65mm  60mm×3
 N-145mm

68-75mm  70mm×3
 O-155mm


Before fitting the handle assembly, please ensure that the internal and external handle, backplate, spindle and fixing screws are removed from the packaging and within easy reach.

Warning!



- Please make sure the main door lock is in the unlocked position. If unsure, use the old handle and spindle and push the handle down before proceeding.

Install External Handle

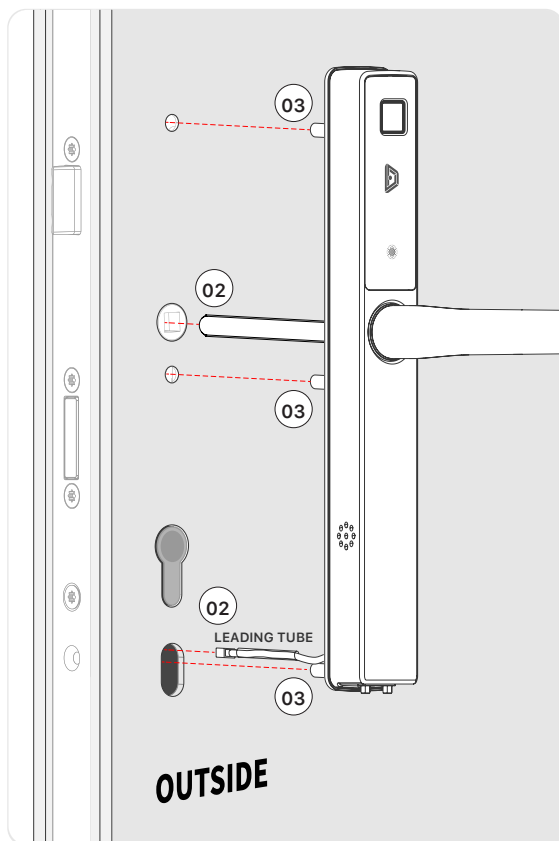

Fit the spindle into the external handle.

From the outside face of the door, take the leading tube and put it over the cable connector head, then feed the cable through the bottom fixing hole as shown. UPVC doors will have 2 internal walls to pass the cable through as well as the outer and inner walls. Push the spindle all the way through.

Make sure the screw pillars pass through the middle of the holes in the door.

Gently pull the connector cable with leading tube through if necessary and check it's not caught or trapped, as this could damage the cable. Remove leading tube from the cable. Hold the external handle in place and fit the mounting plate (see next page).

NOTE




- Please note, you may need to increase the size of the bottom fixing hole to allow both the cable and screw to pass through. Please see FAQ's on Blusafe website.

Install Internal Mounting Plate

Ensure the mounting plate is in the correct orientation with the rubber pad against the door face (see diagram).

Feed the electrical connector and cable through the bottom slot, you may need help to do this as you will be holding the outer handle in position at the same time.


Push through and loosely tighten the fixing screws into the screw pillars on the outer handle. Check the mounting plate is firmly against the door face.

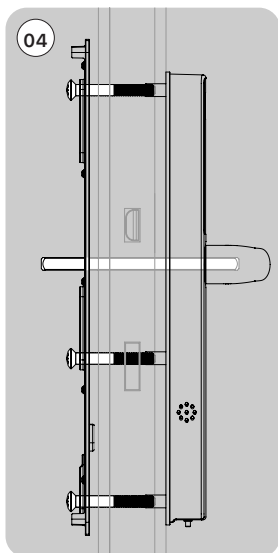

Warning!





- DO NOT fully tighten the fixing screws.

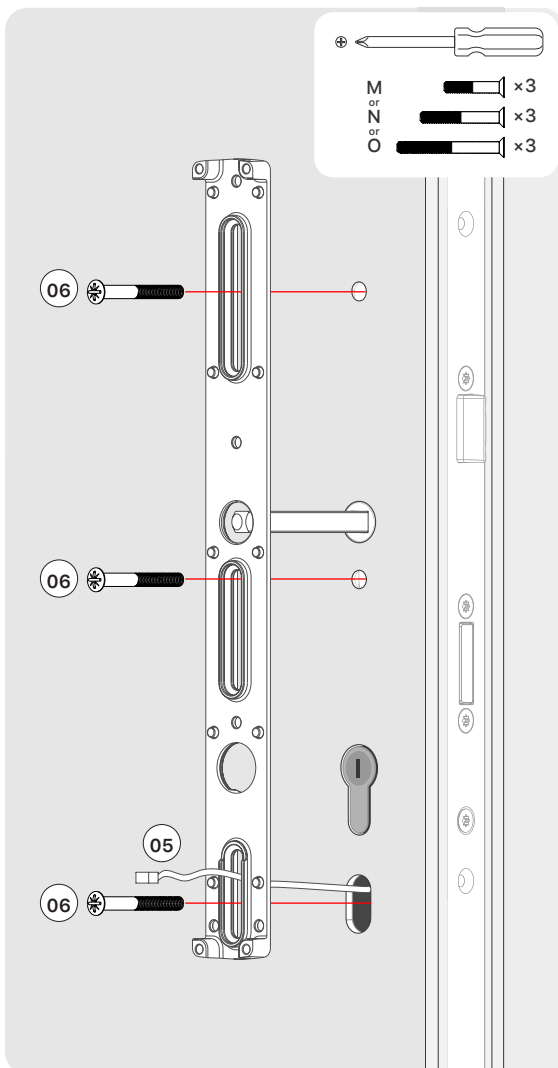


Fit the Drive Bar

fig.1

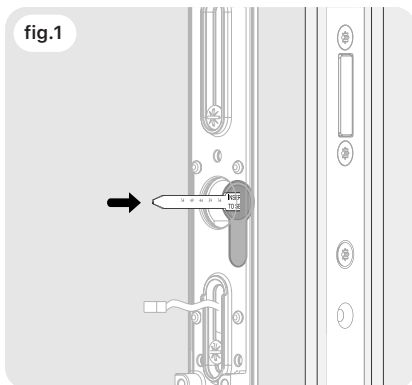

Push the setting tool fully into the slot in the operating cam (see fig.1).


fig.2

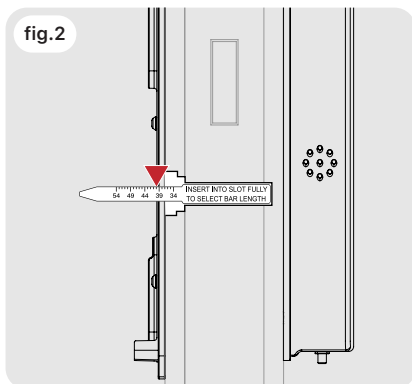

The mark nearest to the face of the backplate shows the correct bar length to use (see fig.2).

Withdraw the setting tool making sure the slot in the cam is in the vertical position.

fig.3

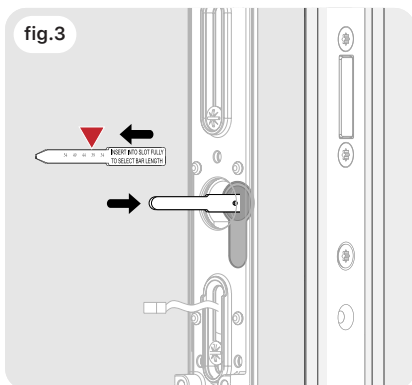

Select the correct length drive bar shown by the setting tool.

Then, wider square end in first, push the bar firmly into the slot until it hits the bottom of the slot.

Reading on Setting Tool (mm)	Bar NO	Bar Length (mm)
34 - 39	G1	35
39 - 47	G2	42.5
47 - 51	G3	50

Use Fitting Jig to Align

Important!



- Ensure the drive bar is vertical. Refer to page 2 to re-set the cam if required.

Remember, there may only be 2 screws not 3.

Slide the black plastic fitting jig over the spindle as shown and check that the drive bar is located correctly in the slot.

Move the internal mounting plate slightly if required until the jig is fully located.

Tighten up the fixing screws firmly but do not over tighten.

Remove the fitting jig. Make sure the spindle and drive bar are in the centre of their holes respectively.

Important!




The jig **MUST** be used.





NOTE



- If the drive bar selected by actual measurement is not exposed at this case nor does it affect normal function.

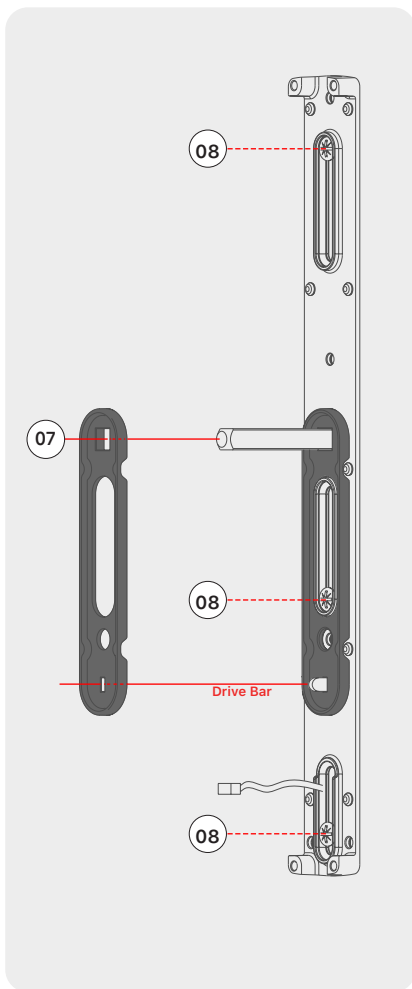

Fix the Mounting Plate

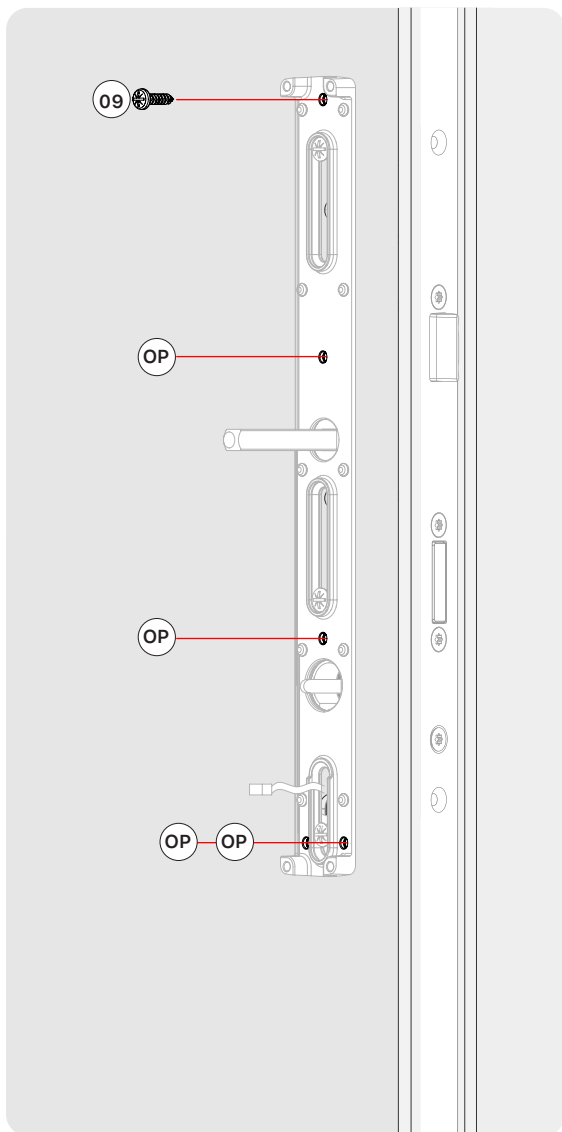

A1



A2

If the top of the backplate is not flush with the face of the door, fit the additional self-tapping screw A1 supplied.

Some composite doors have steel skins so it may be necessary to use a powered driver with a self-drilling screw A2 (supplied).

Please be careful to tighten by hand to avoid stripping the door skin.

Other optional (OP) fixing points are available if required (screws not provided).

Note



- Screw A1 is a self-tapping screw.
- Screw A2 is a self-drilling screw.

Fitting the Internal Handle

Check that the handle is facing the correct way (see page 3).



Check the alignment arrows on the turn cylinder are facing straight up as shown below.

Carefully connect the connector to the handle as shown, red side to red side.


Important!



- Make sure the drive bar is vertical and the cam is retracted also slot arrows are vertical before fitting.

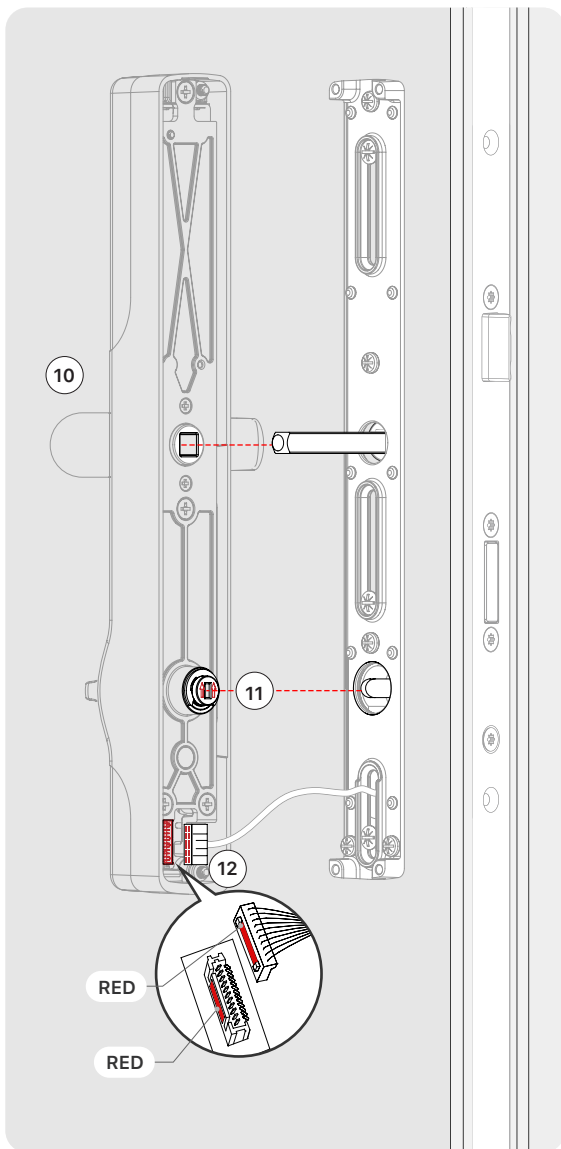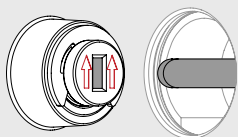

Fitting the Internal Handle

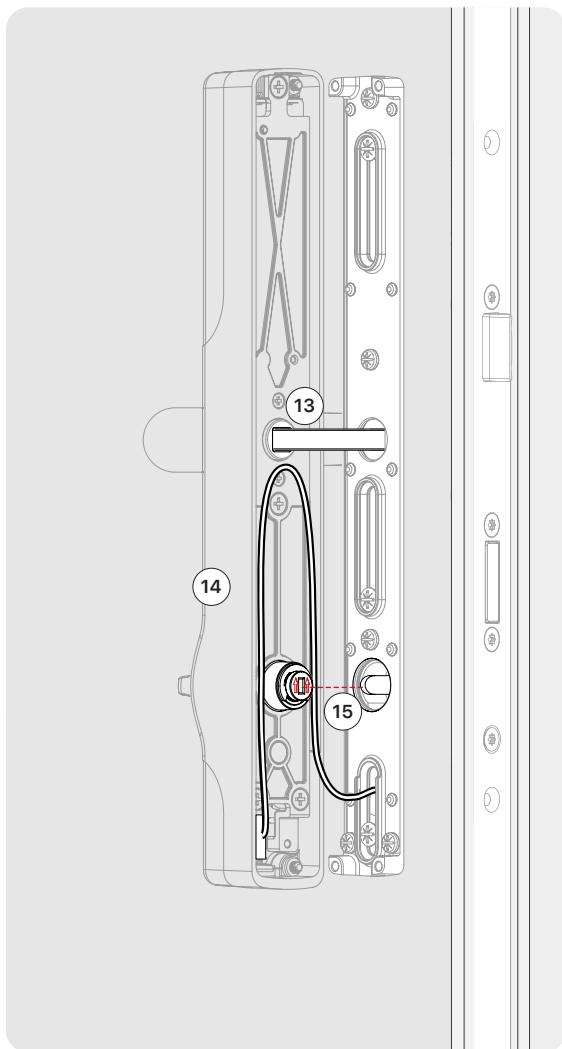

Locate the handle onto the spindle.

Push the handle in slowly ensuring that the cable goes around the thumb turn as shown in the diagram.

Check that the drive bar is fitting into the slot in the thumb turn cylinder and push the handle fully home.

Finally, double check that the handle is seated correctly on the backplate and that the cable is not visible (not caught under the edge of the handle).

Important!



- Please make sure cable is tucked into allocated slot when fitting handle.


Fitting the Internal Handle

Fit the 4 fixing screws supplied manually (do not use a power screw driver). Do not over tighten the screws.


Warning!



- DO NOT push down or lift the handle at this stage.

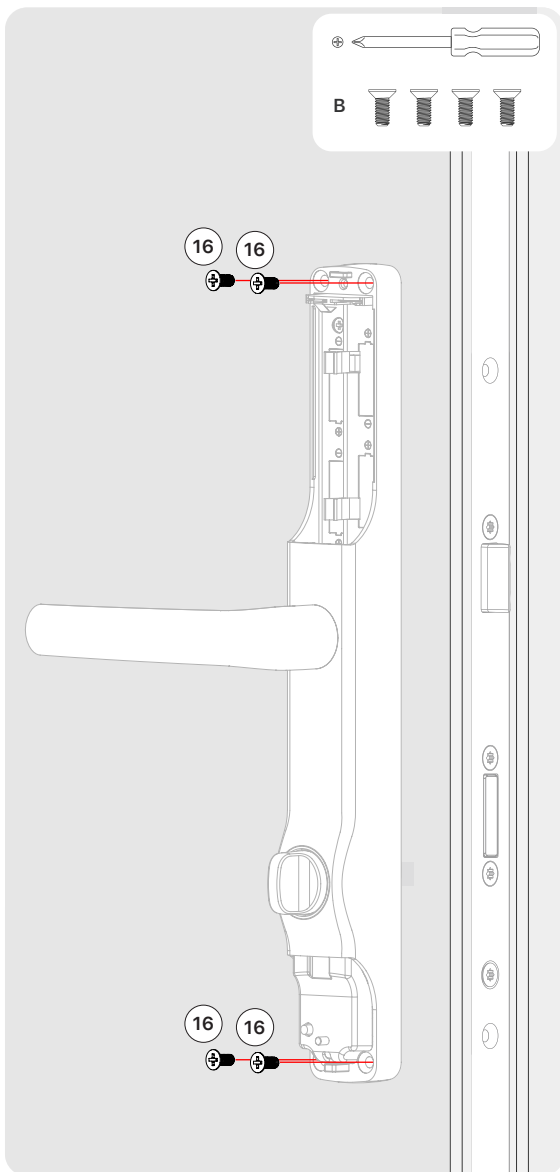

Check Thumb Turn

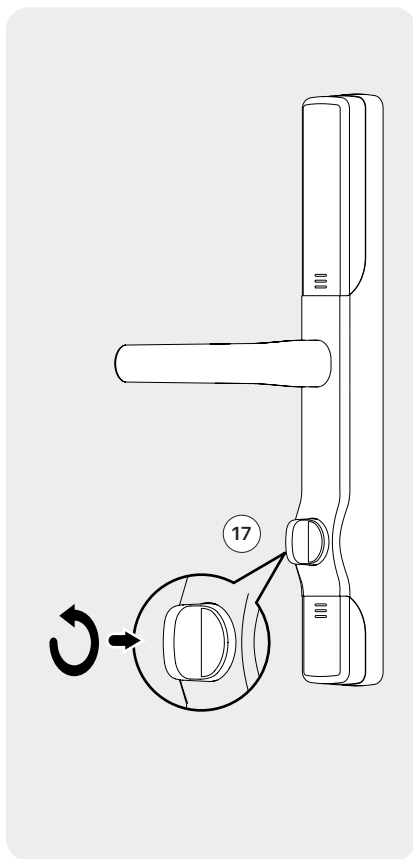

Lift the handle to extend the deadbolt.

To use the thumb turn:

- Gently press it until it drops into place.

- Push firmly and turn:

Turn anti-clockwise if the handle is on the left side of the door.

Turn clockwise if the handle is on the right side of the door.

Ensure the door is deadlocked by trying to depress the handle. If it remains firm, the deadbolt is engaged. If not, please return to 'Reset the cam' on Page 2 and redo all subsequent steps.

To unlock, turn the thumb turn in the opposite direction, and depress the handle to retract the deadbolt.


Once you are happy that the thumb turn is operating easily and isn't stiff or sticking, you can tighten up the cam fixing screw (Page 2). Be careful not to tighten too much and still leave a small amount of slack. To set up the handle please do not fit the bottom cover yet.

Fix



- If the thumb turn is sticking or is stiff to operate, the cam fixing screw may be too tight. Undo the screw by 1 turn and try again. Double check the correct length drive bar on page 12, if not redo all subsequent steps.
- If after this it is still sticking, please refer to the FAQs on the website to see how to fix this.

Internal Handle Set Up

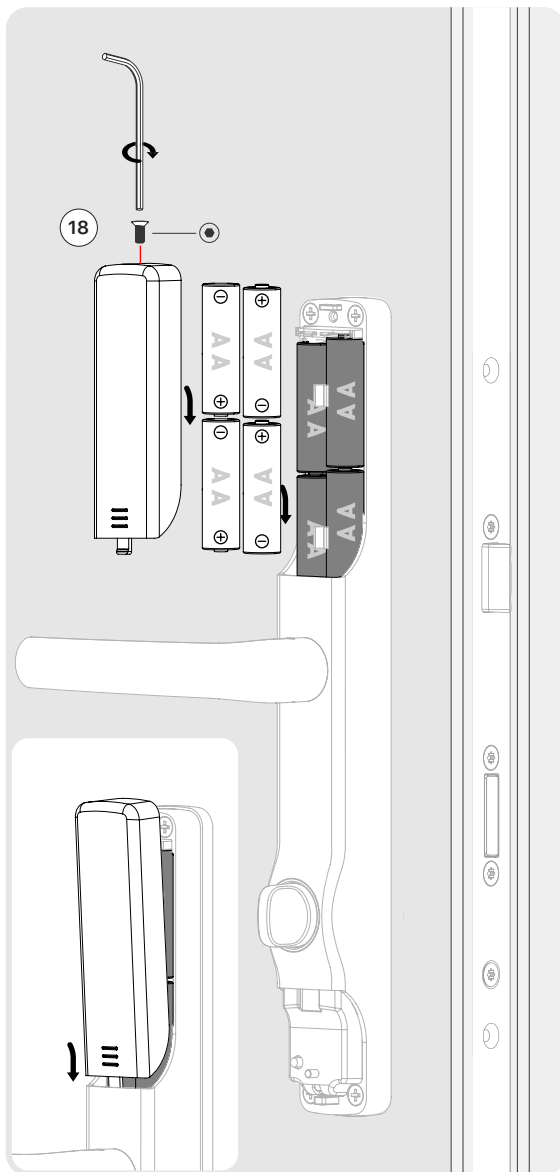

Please insert 4 AA batteries (to be purchased separately). Fit the cover and secure with the screw C provided.

This is a security screw for child safety. The Allen key needed is supplied in the box.

You will hear a 'beep' to confirm that the batteries are correctly fitted.

You will be instructed to 'PLEASE PUSH THE LEVER HANDLE DOWN!'. Once done, you will be instructed to 'PLEASE LIFT THE LEVER HANDLE!'

You should hear the motor turn and then hear 'DOOR IS LOCKING'.



Try to push the handle down. If the handle has been correctly fitted, the handle should not push down.

Important!



- The batteries will work in the handle for 8 months depending upon usage and environment. It is recommended to change the batteries every 6 months for optimal performance.
- When the batteries are running low, you will hear a 'Low Battery' warning upon each use of the handle. You will have approximately 50 warnings before the battery runs out.

Fit the Setting Cover

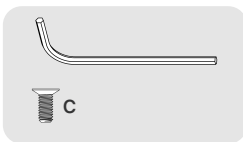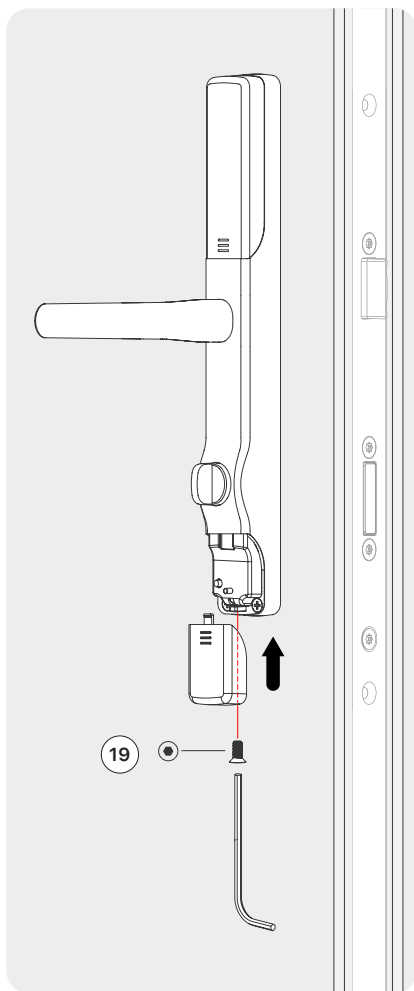

We recommend you use the App to set up the handle, please refer to the User Manual to do this.

You may also set up and use the handle manually (without the App). Please refer to the User Manual for details.

Once setup is complete, simply fit the cover to the bottom of the handle and secure with the screw provided (C).

This is a security screw for child safety, the allen key needed is supplied in the box.

Important!




- Please keep this allen key in case the cover needs to be removed in the future.

FCC Warning Statement



- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - -- Reorient or relocate the receiving antenna.
 - -- Increase the separation between the equipment and receiver.
 - -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - -- Consult the dealer or an experienced radio/TV technician for help.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and(2) this device must accept any interference received, including interference that may cause undesired operation.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

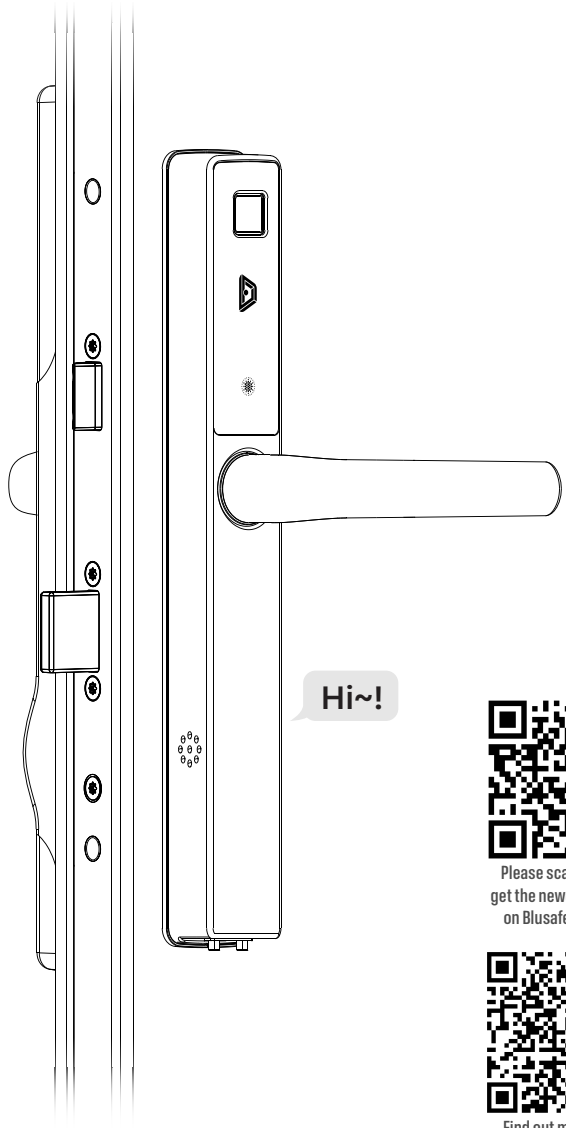

Please scan the QR to
get the newest manuals
on Blusafe products



Find out more about
Blusafe vulnerability
discovery & disclosure
procedures